

# ONE SERVO DECODER

Programming options: (see Table)

- press and hold program button for more than 3 seconds while LED starts flash
- while LED flashes slow – address of servo setting
- press button again shortly and LED will lit continuously – range of servo setting
- press button again shortly and LED will flash fast – speed of servo setting

Programming:

- choose options with push button
- enter values using any kind of Hand controller
- to program values enter value as an address of accessory and let the servo move with „+” or „-” (left/right) button on your Hand controller
- mircochip stores that value and moves the servo with the new programmed values.

Press button once shortly to move servo manually.

LED status	Values	Description
LED off		Normal operation
LED flashes slow	1...2048	Programming the address of servo
LED lit	1..100	Programming the range of servo (100 = 180 deg.)
LED flashes fast	1..20	Programming the speed of servo (1-fast, 20-slow)

